

RS232 CABLE GUIDE

Courtesy of Research Electronics !!!

While we strive for accuracy, if you would like to submit any additions or alterations please email us at info@researchelectronic.com

A

- Ariza Ultra 400 - Null
- Ariza Ultra 500 - Null
- Ariza 700 - Null
- Ariza 750 - Null
- Ariza Extreme - Null
- Astrovox 2600 - Straight

B

- Blackbird (All) - Null
- BlueJay2 - Null
- Buzz S2010F - Null
- Buzz S2010F Plus - Null

C

- CaptiveWorks 500S - Null
- CaptiveWorks 600S - Null
- CaptiveWorks 600 Premium - Null
- CaptiveWorks 650 Classic - Null
- CaptiveWorks 700 - Null & USB
- CaptiveWorks 800 - Null & USB
- CaptiveWorks 1000 - Null & USB & ETHERNET
- CaptiveWorks 4000 HD - Null & USB & ETHERNET
- Conaxsat CNX V1 - Null & USB
- Conaxsat CNX Duo - Null & USB
- Conaxsat CNX Mini - Null & USB
- Conaxsat CNX Nano - Null & USB
- Conaxsat CNX Nano2 - Null & USB
- Conaxsat CNX Nano Premium - Null & USB
- Conaxsat CNX Trio - Null & USB
- Coolsat 4000 Plus - Null
- Coolsat 4000 Pro - Straight
- Coolsat 5000 - Straight
- Coolsat 6000 - Straight
- Coolsat 7000 - Null
- Coolsat 7100 - Null & USB
- Coolsat 8000 - Null
- Coolsat 8100 - Null & USB
- Cooltec - Straight
- Coship (All) - Null

D

- DGStation Mutant 200S - Null
- DGStation Relook 400S - Null
- DGStation Relook 300SV - Null
- Digiwave 5900C - Null
- Digiwave 6800 - Null
- Digiwave 7000 - Null
- Digiwave 7200S - Null
- Digiwave Diamond - Straight
- Dreambox (All) - Null

E

- Eagle Star 2500A - Straight
- Extremeview Magnum XV3300 - Null

F

- Fortec 5000v2 - Null
- Fortec 5100 Diamond - Straight
- Fortec 5100 Plus - Straight
- Fortec 5100 Plus+ - Straight
- Fortec 5100 Ultra - Straight
- Fortec 5400 NA - Null
- Fortec 5400 - Null
- Fortec 5600 Plus - Straight
- Fortec 5600 Ultra - Straight
- Fortec 5600v2 - Null
- Fortec ALPHA - Null
- Fortec BETA - Null
- Fortec Lifetime - Straight
- Fortec Lifetime Classic NA - Null
- Fortec Lifetime Classic - Null
- Fortec Lifetime Diamond - Straight
- Fortec Lifetime ULTRA - Straight
- Fortec Lifetime Ultra Diamond - Straight
- Fortec MAGIC - Straight
- Fortec MERCURY II - Null
- Fortec Platinum NA - Null
- Fortec PLATINUM - Null
- Fortec Ultimate - Straight

I

- Ilink (All) - Null & USB

L

- Lava 2600 - Null
- Lava 3200 - Straight
- Lava 3500 - Null

M

- Max 2500 - Null
- Megasat (All) - Straight
- Microroyal (All) - Null
- Mvideo FS 4000 - Null

N

- Neosat Lite - Straight
- Neosat Lite Premier - Straight
- Neosat iPro1000 - Null & ETHERNET
- Neosat iPro2000 - Null
- Neosat iPro 2000+ - Null & USB
- Neusat SP6000 - Straight & USB
- Orasat V5 - Null
- Oralsat - Null

P

- Pansat 200A - Null
- Pansat 300A - Null
- Pansat 330A - Null
- Pansat 500 CI - Null
- Pansat 700H - Null
- Pansat 1500A - Straight
- Pansat 2000V - Null
- Pansat 2300A - Straight
- Pansat 2500A and All Clones - Straight
- Pansat 2700A/E - Null
- Pansat 3500S - Null
- Pansat 3500SD - Null & SD CARD
- Pansat 4500 PVR - Null & USB
- Pansat 5000HC - Null & USB
- Pansat 6000HXC PVR - Null & USB
- Pansat 250SM - Null & USB
- Pantec/Multistar Max (All) - Null
- Pantec/Multistar MS (All except MS1000) - Straight
- Pantec MX/Ultra - Straight

R

- Rex1 - Null

S

- SatCruiser - Null
- SatPros DSR500 - Null
- Silver Bullet/ST 1000 - Null
- Silver Bullet/ST 2000 - Null
- Skyview 500 - Straight
- Skyview RX600 - Null
- Smartwave 2500A-N2 - Straight
- Smartwave 2700A-N2 - Straight
- Sonicview SV 1000 - Null
- SonicView SV 1000 PVR - Null & USB
- Sonicview SV 4000 - Null & USB
- Sonicview SV 360 Premier - Null & USB
- Sonicview SV 360 Elite - Null & USB
- Sonicview SV 8000 HD - Null & USB
- Sonicsat Koolsat - Null
- Sonysat - Null & USB
- Spacestar DVB500 - Null
- Stealth 2000a - Null

T

- Technosat 1010 Plus - Null
- Techsat - Null
- Topsat - Null & USB
- Traxis DBS 1500 - Straight
- Traxis DBS 2500 - Straight
- Traxis DBS 3500 - Straight
- Traxis DBS 4500 - Straight
- Traxis DBS 4550 - Straight
- Trimax T100 - Straight

U

- Ultrastar 5000 - Null

V

- Viewsat VS 2000 Extreme - Null
- Viewsat VS Max HD - Null & USB
- Viewsat VS 2000 Platinum - Null
- Viewsat VS 2000 Platinum Lite - Null
- Viewsat VS Pro - Null & USB
- Viewsat VS 2000 Ultra - Null & USB
- Viewsat VS 2000 Ultra Lite - Null & USB
- Viewsat VS 7000 PVR - Null & USB

- Viewsat VS 9000 HD - Null & USB
- Vortex 2700 - Null
- Vortex 3500 - Null
- Vortex 7700 - Straight

X

- Xrica X5 - Null